

# TEASMADE.COM

## Goblin 844 and 854 Operating Instructions

- 1 It is always advisable to have older teasmades checked and passed for use by a qualified person. Check the rating plate on the back of the teasmade and make sure that it is suitable for your electricity supply. Your supply should be an alternating current and not subject to interruption. Check the plug - your teasmade must be earthed.
- 2 Always operate the teasmade on a level surface.
- 3 The clock should start immediately when you plug the teasmade in. If it does not start there is a fault.
- 4 Adjust the clock to the correct time - turn the hand set knob on the back of the clock case anti-clockwise
- 5 These teasmades have a 12 hour clock. Teasmades with 12 hour clocks cannot be set more than 11 hours in advance of the time required for tea making.
- 6 Set the alarm hand using the alarm set wheel under the clock dial - turn it from left to right.
- 7 Put the required amount of tea (loose tea or tea bags are both acceptable) in the teapot and place it in position. If the teapot is not placed correctly the buzzer will sound immediately the rotary knob is turned to the AUTO position.
- 8 Check the kettle for damage or excessive limescale. Do not operate if there is evidence of either.
- 9 If the kettle is sound, fill it taking care to observe the maximum level pointer inside the kettle. If the kettle is overfilled boiling water may spurt from the vent hole in the lid. Fit the lid securely.
- 10 Place the kettle on its platform and plug it in using the kettle connector (never plug teasmade kettles directly into the mains). Ensure that the platform has freedom of movement. Position the feeder tube over the teapot.
- 11 Turn the teasmade on by turn the rotary knob to AUTO
- 12 Go to sleep.
- 13 You will be wakened by an enthusiastic gurgling sound, and finally by the buzzing of the alarm.
- 14 Turn the rotary knob to the LIGHT or OFF position. Either will silence the buzzer.
- 15 These teasmades can be used as an alarm clock without using the tea making facility. Ensure the kettle is empty, place the teapot in position and turn the rotary knob to AUTO. The buzzer will sound approximately 15 minutes before the time set. Turn the rotary knob to the LIGHT or OFF position to silence the buzzer.
- 16 These teasmades can be used as a bedside light. Turn the rotary knob to the LIGHT position whether or not the teasmade has been set. Turn it back to AUTO or OFF as required.
- 17 To replace the light bulb disconnect the teasmade from the mains. This teasmade uses one 40 watt S.B.C. candle lamp. Do not use any other light bulbs. Loosen the small screw which secures the lampshade lock in the top metal cover of the lampshade - one turn is enough. Slide the screw head to the rear, lift the lampshade to clear the retaining hook and pull forward. Fit the new lamp and replace the shade. Slide the screw head forward and tighten it to lock the lampshade back in position.